QUICK START GUIDE

Cue the happy dance, your Purpl PRO is here!

In this guide, we've included all the instructions you'll need to get your Purpl PRO up and running. And if you do get stuck, go to purplhelp.com for more help!

WHAT'S INCLUDED IN THE PURPL CASE?





CHARGING CORD USB-C CABLE TO CHARGE YOUR PURPL PRO




CLEANING BRUSH KEEPS YOUR GRINDER AND SAMPLE HOLDER CLEAN BETWEEN USES



GRINDER + FUNNEL USED TO GET YOUR SAMPLE PREPPED & READY TO BE TESTED

FLIP THIS PAGE OR SCAN FOR QUICK START INSTRUCTIONS



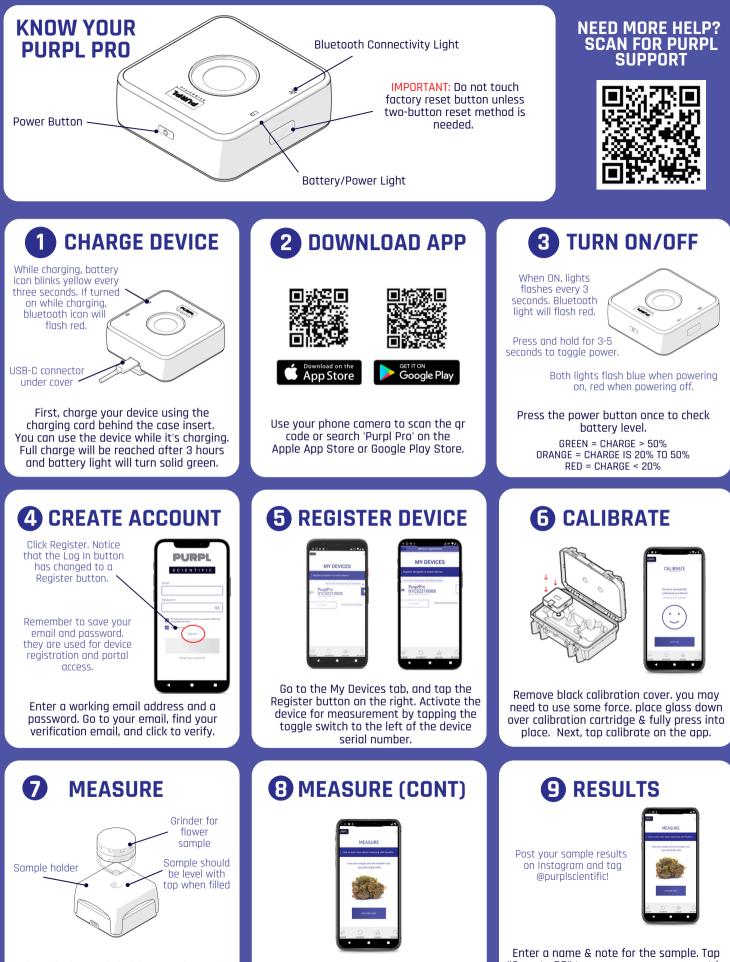

Place black sample holder over the Purpl Pro, using SLX grinder, grind your flower sample into the sample holder.

Once filled, place cap back over sample holder. on your purpl pro app, tap measure. "Save to DB" to save your measurement in the user portal. Login with your Purpl username/password.